



PCIe2 to S-RIO2 Evaluation Platform Quick Start Guide

Formal Status
April 20, 2015



About this Document

The *PCIe2 to S-RIO2 Evaluation Platform Quick Start Guide* outlines the first steps to complete in order to get the board to a powered on state.

Related Resources

The following related resources are available on the mySites area of www.idt.com:

- *PCIe2 to S-RIO2 Evaluation Platform User Manual*
- *Tsi721 Evaluation Board Schematic*
- *Tsi721 User Manual*
- *CPS-1432 User Manual*

PCIe2 to S-RIO2 Evaluation Platform Quick Start Guide

Kit Contents

Part Number	Components	Description
TSI721-16GEBI	Evaluation Board	<ul style="list-style-type: none"> • PCIe2 to S-RIO2 Evaluation Platform with Tsi721 and CPS-1432 • <i>PCIe2 to S-RIO2 Evaluation Platform Quick Start Guide</i>
	RapidFET JTAG - Standard ^a Debug Tool with a 30-day trial of the "Enhanced" functionality	<ul style="list-style-type: none"> • RapidFET USB to JTAG/I2C Module • RapidFET JTAG USB Key • USB Cable, 1 m • <i>RapidFET JTAG Quick Start Installation Guide</i>

- a. For more information about the RapidFET JTAG - Standard and Enhanced debug tools, go to the Fabric Embedded Tools website at www.fetcorp.com.

Handling Procedure

Components on the evaluation platform are sensitive to electrostatic discharge (ESD); therefore, use standard ESD protection when handling the board.

The printed circuit board is fragile. Excessive force will cause the circuit board to flex and possibly break the thin solder joint between the components and the circuit board. Severe flex may also break internal connections in the board. When handling the evaluation platform, adhere to the following guidelines:

- Support the circuit board when inserting or removing the ATX connectors.
- Do not push the AMC modules with excessive force.
- Do not push with excessive force on the JTAG, I2C, USB, and SMA connectors.

Out-of-the-box Configuration Requires Connection to Host PC

The evaluation platform is configured to operate connected in a PCI Express slot. It will not work stand-alone unless the board configuration is changed. For more information about the stand-alone configuration, see the *PCIe2 to S-RIO2 Evaluation Platform User Manual*.

Power Supply Requirement

When the platform is plugged into a host computer, it does not require an external power supply. When used without an AMC module plugged into the platform, the platform will draw about 1 Amp on the computer 12V rail.


If an AMC module is used, the current draw may be excessive for the host PC. In this condition, an external supply should be used (for more information, see the *PCIe2 to S-RIO2 Evaluation Platform User Manual*).

LED Status

1. With the PC power off, plug the evaluation platform into a PCIe slot in the PC.
2. Turn the PC on.
 - The green LED, (D18), should be ON and steady. This indicates the PC is supplying 12V.
 - The blue LED, (D21) should be ON and steady. This indicates the on-board voltages are correct and the devices are out-of-reset.



LED D1 Indicates the link between the host PC and Tsi721 is active.

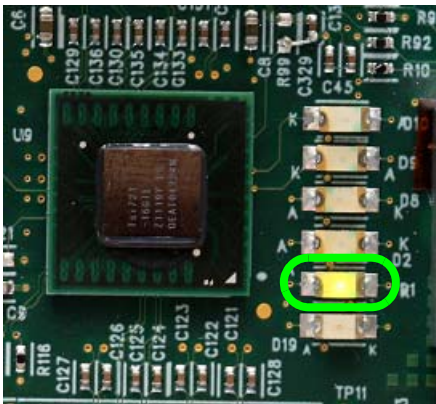

Connecting AMCs

Insert AMC modules into the card guide assembly component-side-down. Push the module in the AMC connector gently until the module snaps in the connector.

The evaluation platform uses a Hot Swap controller to control current flow to the AMC module. Current will be applied to the module only when the Presence Detect pins (PS0 and PS1) of the module make contact. The fans will turn, a green LED (D3) will indicate power has been applied to the modules, and the AMC ENABLE signal will be asserted.

If the LED does not turn on after the module is inserted, verify that the module is fully pushed in.

The current limit per AMC connector is 6.25A for the 12V rail, and 165mA for the 3.3V management power pin.

The evaluation platform does not have an IPMI (Intelligent Platform Management Controller). AMC modules that require IPMI control to come out of reset may not work with the evaluation platform.



Connecting the JTAG Debugger (RapidFET) to Tsi721

There are two options:

1. Use the RapidFET pod and connect the connector labeled JTAG to the header labeled "BR JTAG".
2. Connect the USB cable directly to the mini USB connector on the faceplate and launch the RapidFET software.

Connecting the JTAG Debugger (RapidFET) to CPS-1432

Use the RapidFET pod and connect the connector label JTAG in the to header labeled "SW JTAG".

Serial EEPROM

The Serial EEPROM attached to the Tsi721 is programmed with register settings pertaining to GPIO settings and Errata work arounds. The Serial EEPROM loads address the following issues:

- GPIO [3:0] are changed from input to outputs. This enables status LEDs.
- RapidIO 5 Gbaud initialization failure

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.