

IDT shall not be liable for any damages arising out of defects resulting from (i) delivered hardware (ii) non-observance of instructions contained in this manual, or (iii) misuse, abuse, use under abnormal conditions or alteration by anyone other than IDT. To the extent permitted by law, IDT hereby expressly disclaims and User expressly waives any and all warranties, whether express, implied, or statutory, including, without limitation, implied warranties of merchantability and of fitness for a particular purpose, statutory warranty of non-infringement and any other warranty that may arise by reason of usage of trade, custom, or course of dealing.

Contents

1	Kit Contents	2
2	Introduction	2
3	Connectors	3
4	Probe and Test Points	3
5	Setup	3
5.1.	Jumper on J3 Connector	3
5.2.	Controlling V_{OUT} via R1 and R2 Values	3
5.3.	Input and Output Connections	5
6	Evaluation Board Schematic	5
7	Evaluation Board Layout	7
8	Related Documents	8
9	Document Revision History	8

1 Kit Contents

- ZSPM4141 Evaluation Board
- Resistor set including 6 different values for 1/10W 0603 SMD resistors (see Table 5.1 for values)
- Kit documentation


2 Introduction

The ZSPM4141 Evaluation Board is a compact system intended to facilitate measuring the performance and operating characteristics of the ZSPM4141 Ultra-low-Power Linear Regulator. The board contains a number of test points to allow evaluating the functions of the ZSPM4141 (see Figure 2.1 and section 4). It has a solid ground plane on the back of the board.

Note: The default part number for the ZSPM4141 Ultra-low-Power Linear Regulator (U1 in Figure 6.1) is the ZSPM4141A11W12 (note 1), which is factory configured for V_{OUT} set to 1.2 V. If the application requires different values for V_{OUT} , see section 5.2 for procedures for modifying V_{OUT} by changing resistor values on the board using the resistor set included with the kit.

Note: The default resistor configuration for the Evaluation Board is with the FB pin pulled up to V_{out} via R1, which has a value of 0.0Ω (i.e., a short), and R2 is unpopulated (NL designation in the schematic in Figure 6.1).

Figure 2.1 ZSPM4141 Evaluation Board Connections

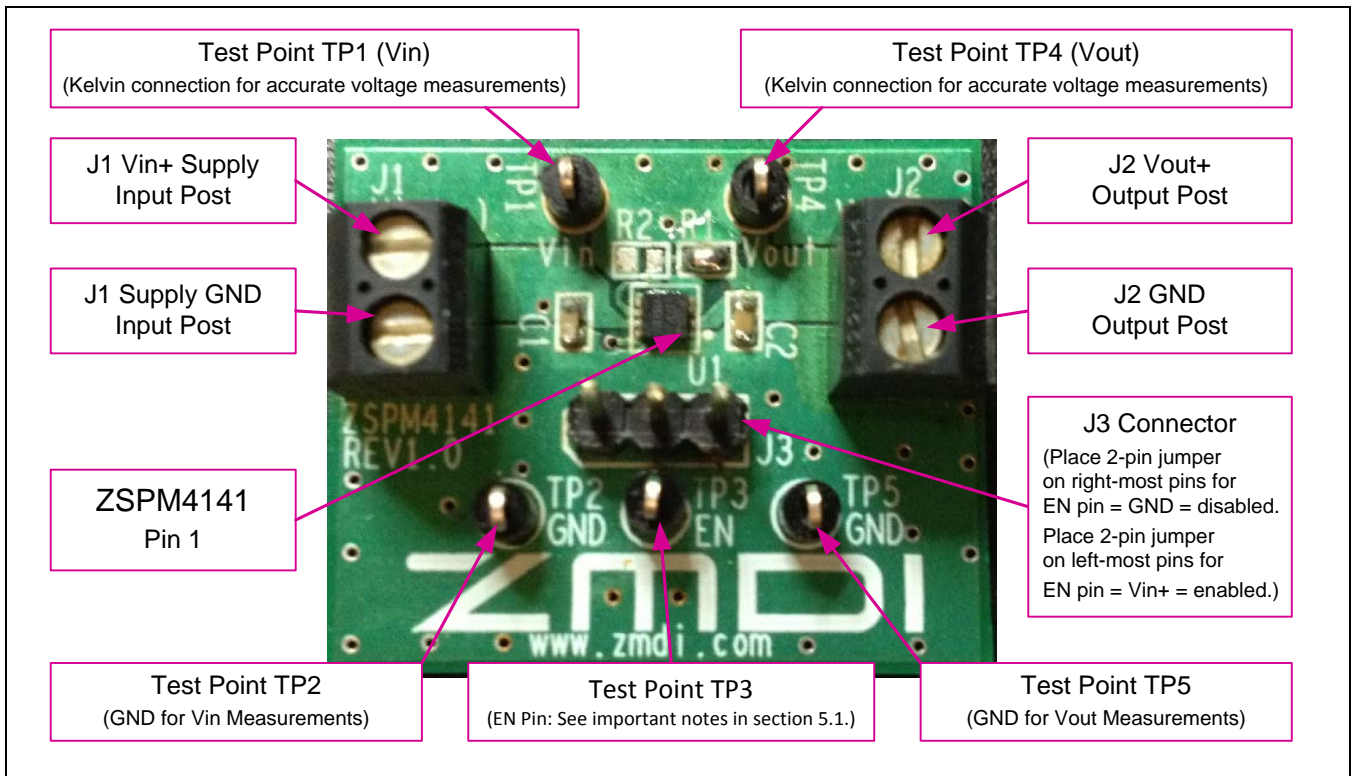

3 Connectors

The board contains the following connectors for external signals and supplies (see Figure 2.1):

- J1:** Screw terminal connection for V_{in} supply (V_{in+} and GND)
- J2:** Screw terminal connection to V_{out} output (V_{out+} and GND)

4 Probe and Test Points

The board contains the following test/probe points (see Figure 2.1):

- TP1/ V_{in} :** Kelvin measurement test point for V_{in} main input.
- TP4/ V_{out} :** Kelvin measurement test point for V_{out} output.
- TP3/EN:** Measurement point for the ZSPM4141's EN pin 8 (enable input), which must be HIGH for the ZSPM4141 to operate (see *ZSPM414 Data Sheet*). Note: do not use TP3 to input a control signal to the EN pin. See section 5.3 for the proper method of inputting a control signal.
- TP2/GND:** Test point for ground; recommended ground for accurate measurements for V_{in} .
- TP5/GND:** Test point for ground; recommended ground for accurate measurements for V_{out} .

5 Setup

5.1. Jumper on J3 Connector

The Evaluation Board's J3 three-pin connector allows manually enabling the device. When a 2-pin jumper is placed on the left-most position (see Figure 2.1), the EN pin is connected to V_{in+} and the VCC pin, which enables the ZSPM4141. If the 2-pin jumper is placed on the right-most position, the EN pin is connected to ground, which disables the ZSPM4141. See section 5.3 for an alternative method of enabling the ZSPM4141.

5.2. Controlling V_{OUT} via R1 and R2 Values

The default configuration for the Evaluation Board results in a V_{OUT} of 1.2V (see section 2). If the application requires a different level for V_{OUT} , V_{OUT} can be modified by changing the R1 and R2 resistor values on the board according to Table 5.1 using the resistor set included with the kit.

The default resistor configuration for the Evaluation Board is with the FB pin pulled up to V_{out} via R1, which has a value of 0.0Ω (i.e., a short), and R2 is unpopulated as shown in Figure 5.1 and also represented by the first row of resistor combinations in Table 5.1.

Figure 5.1 ZSPM4141 Evaluation Board Default Configuration for R1 and R2

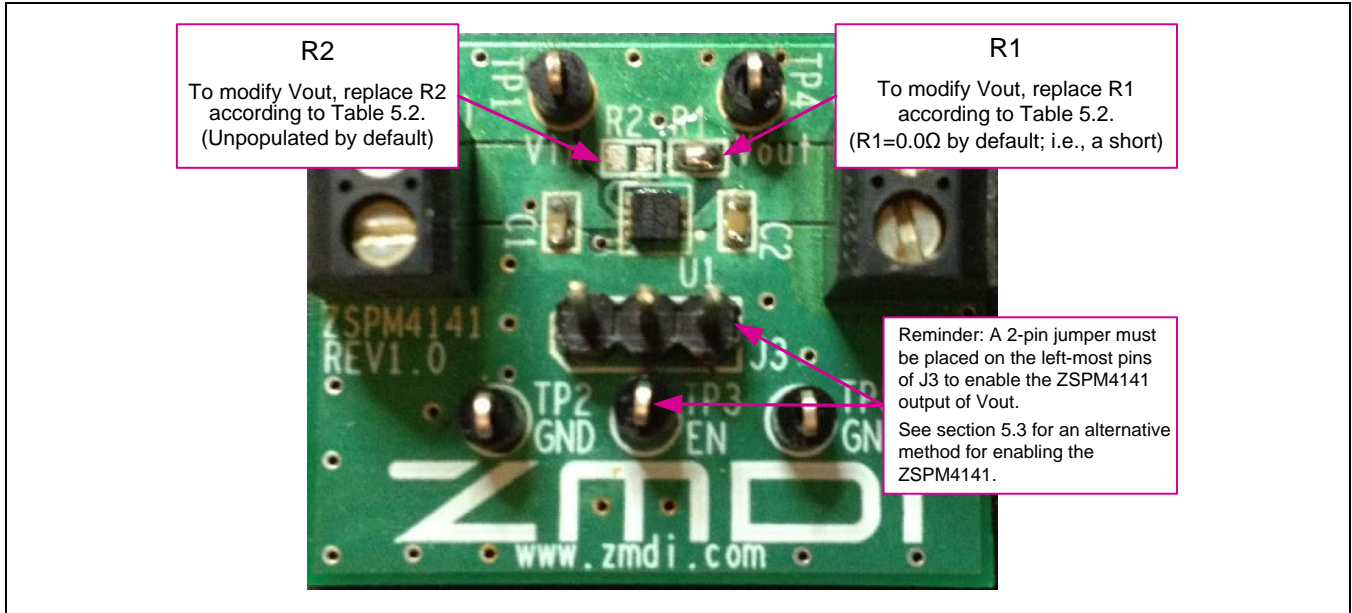


Table 5.1 Resistor Combinations for Setting Vout

Vout	R1 (+/-0.1%)	R2 Calculated	R2 Standard Value	Current Drawn by Feedback Divider	Comments
1.2V	0Ω	Unpopulated	Not applicable	Not applicable	Default
1.5V	1000000Ω	4000000Ω	4.02MΩ	0.30μA	R1 and R2 standard values included in resistor set provided with kit.
1.8V	1000000Ω	2000000Ω	2MΩ	0.60μA	R1 and R2 standard values included in resistor set provided with kit.
3.0V	1000000Ω	666667Ω	665KΩ	1.80μA	R1 and R2 standard values included in resistor set provided with kit.
3.3V	1000000Ω	571429Ω	576KΩ	2.10μA	R1 and R2 standard values included in resistor set provided with kit.
4.2V	1000000Ω	400000Ω	402KΩ	3.00μA	R1 and R2 standard values included in resistor set provided with kit.

5.3. Input and Output Connections

Connect the input voltage supply for the ZSPM4141 at the J1 screw terminal with the leads connected as indicated in Figure 2.1.

The output of the ZSPM4141 Evaluation Board can be measured at the J2 screw terminal.

Recommendation: Use J1 and J2 only for power connections. Use test points TP1 (Vin) and TP4 (Vout) as Kelvin connections for accurate voltage measurements (see Figure 2.1).

Optional: Instead of using the EN pin jumper on J3 described in section 5.1 for manually enabling/disabling the ZSPM4141, a signal can be input on J3 to control the enabling of the ZSPM4141. In this case, remove the jumper on J3 and connect the control signal (e.g., a function generator) to J3 with the positive lead on the middle pin and the ground lead on the right-most pin of J3. Note the J3 jumper **must** be removed; otherwise the board will be damaged. Do not use TP3 to connect the control signal.

6 Evaluation Board Schematic

Figure 6.1 ZSPM4141 Evaluation Board Circuit


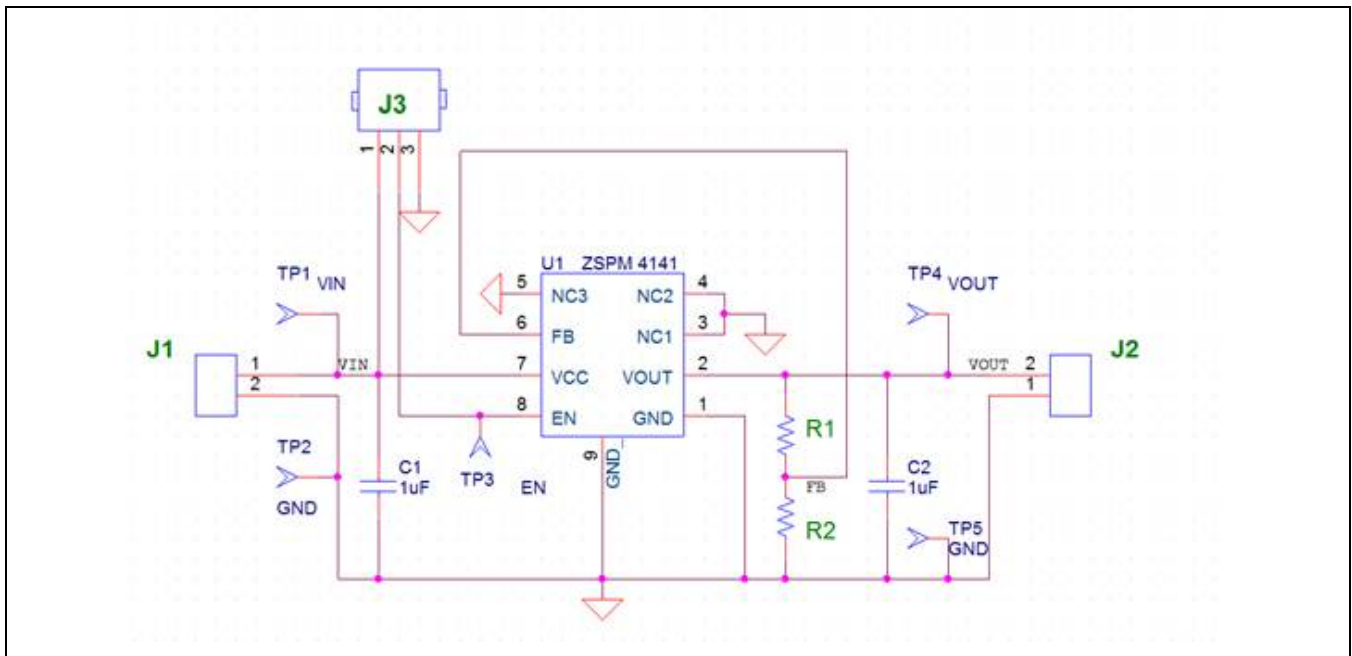


Table 6.1 ZSPM4141 Evaluation Board Bill of Materials (BOM)

QTY	Reference	Description	Manufacturer	Manufacturer P/N	Digikey P/N
1	U1	ZSPM4141	IDT	ZSPM4141AI1W12	N/A
2	C1, C2	CAP CER 1UF 25V 10% X5R 0603	TDK	C1608X5R1E105K	445-5146-2-ND
1	R1	Default configuration: RES 0.0 OHM 1/10W 0603 SMD See section 5.2.	Stackpole	RMCF0603ZT0R00	RMCF0603ZT0R00CT-ND
0	R2	Not populated in default configuration. See section 5.2.			
5	TP1, TP2, TP3, TP4, TP5	Test Point	Keystone	5001	5001K-ND
2	J1, J2	Terminal Block 3.5mm 2-pos PCB	On Shore Technology Inc	ED555/2DS	ED1514-ND
1	J3	Header 3 pin 2.54mm	TE Connectivity	3-644456-3	A31113-ND

7 Evaluation Board Layout

Figure 7.1 ZSPM4141 Evaluation Board Layout – Top View

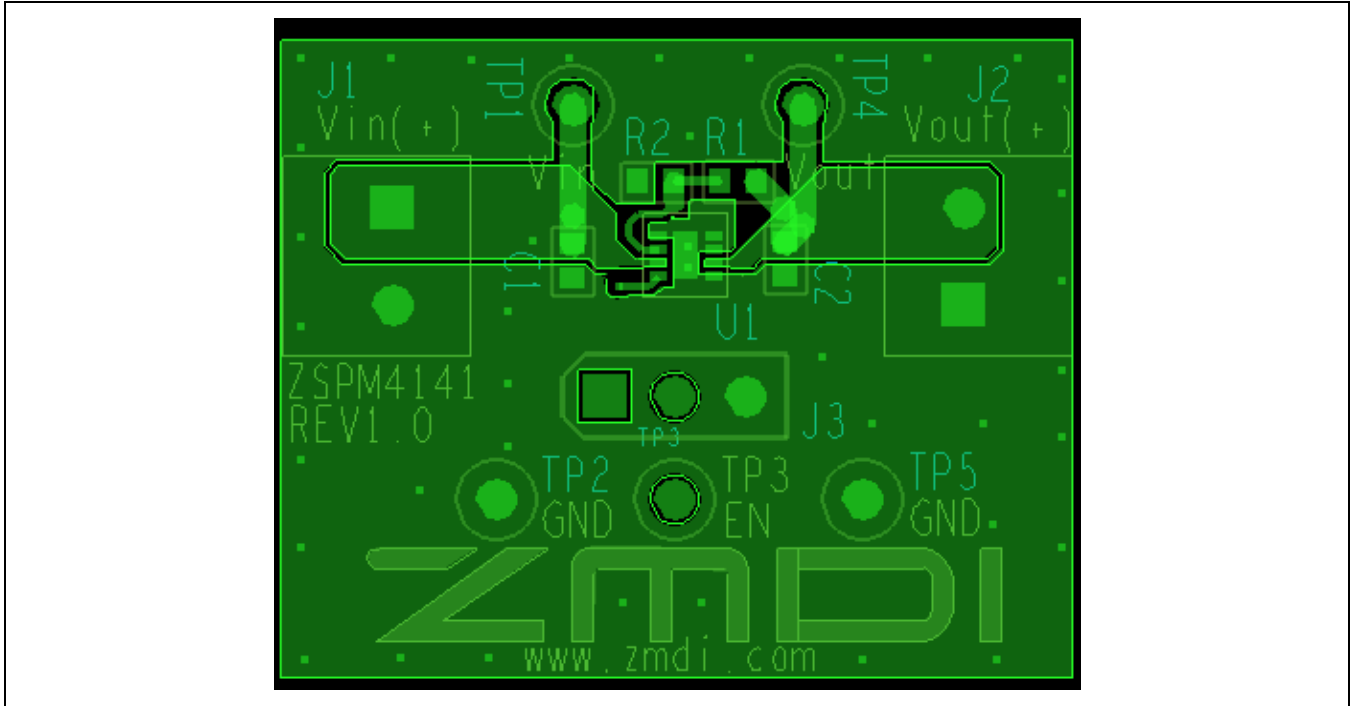

8 Related Documents

File Name
<i>ZSPM4141 Data Sheet</i>
<i>ZSPM4141 Feature Sheet</i>

Visit www.IDT.com/ZSPM4141 or contact your nearest sales office for the latest version of these documents.

9 Document Revision History

Revision	Date	Description
1.00	November 14, 2012	First release.
	April 15, 2016	Changed to IDT branding.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.